



V33 Plus

Quick Start Guide

The information in this manual is subject to change without notice.
Rexing All Rights Reserved

www.rexingusa.com

Overview

Thank you for choosing REXING! We hope you love your new product as much as we do. If you need assistance, or have any suggestions to improve it, please contact us. You can reach us via care@rexingusa.com or call us at (877) 740-8004. Our support team will respond you as soon as possible.

Always a surprise in Rexing. Check us out here.

<https://www.facebook.com/rexingusa/>

<https://www.instagram.com/rexingdashcam/>

<https://www.rexingusa.com/support/registration/>

Facebook



Instagram



Site



1. What's in the Box

1.



2.



3.



 
4.



5.




6.



7.



8.

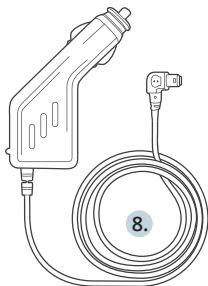


9.





1. V33 Plus Quick Start Guide
2. Safety Guide
3. 3M Adhesive Mount
4. Cable Adhesive Spacer
5. Cable Management Tool
6. Rexing V33 Plus Dash Cam
7. 64GB Micro SD Card
8. Car Power Connector (12ft)
9. V33 Plus Rear Camera with Extension Cable (22ft)

2. Camera Overview

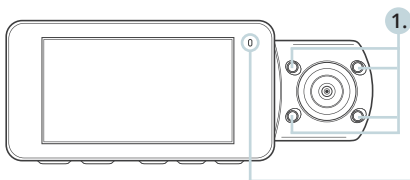


The camera is recording when the LED is flashing red. The device is charging or powered on when the LED is solid red.

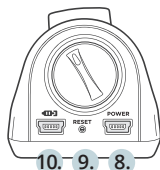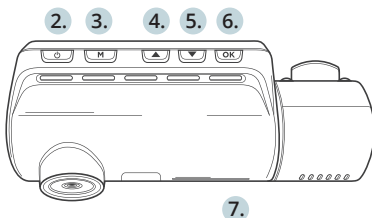

1. 4 IR Lights
2. Power Button / Screen Toggle Button
3. Menu Button / Playback Button
4. Up Button / Mode Button / Wi-Fi Button
5. Down Button / Mic Button
6. OK (Confirm) Button / Video Lock Button / Record Button
7. Micro SD Card Slot
8. Power / USB Charging Port
9. Reset Pinhole
10. Rear Camera Port

Screen Icons

Exposure Value

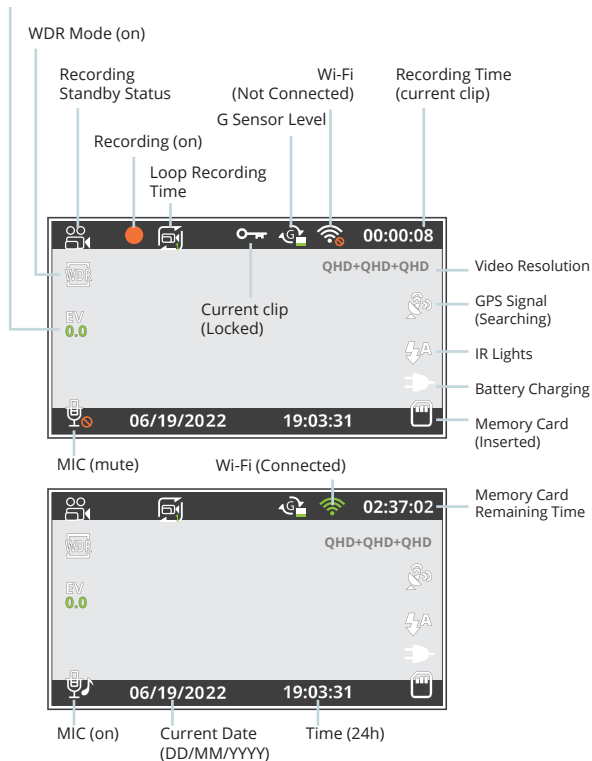


3. Installation

Step 1: Install the Dash Camera


Place the 3M tape on the mount and properly orient the mount square to the roof and hood line of the vehicle.

Firmly press the mount onto the windshield. Wait **at least 20 minutes** before mounting the camera. Orient the mount as shown on the illustration below.

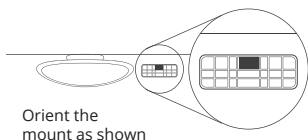

Step 2: Insert the memory card


The Rexing V33 Plus accepts **Class 10/UHS-3 or higher** Micro SD memory cards up to 256GB. You will need to insert a memory card before begin recording. **Before inserting or removing a memory card, first ensure you've powered down the device.** Gently push the memory card in until you hear a click, and allow the spring release to push the card out.

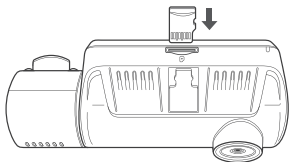


Step 3: Power on the Camera and Format the Memory Card

Power the camera by connecting the charger to the car cigarette lighter and camera. To ensure the V33 Plus records to your memory card properly and without error. **Before you start using a new memory card, you MUST format the card within the camera using the format function.** Always backup important data stored on the memory card before formatting.

To format the memory card, make sure you have inserted your memory card, then turn on the device by connecting to a power source. Press **OK** to stop recording. Then press the **MENU** button twice to enter the System Setup Menu.

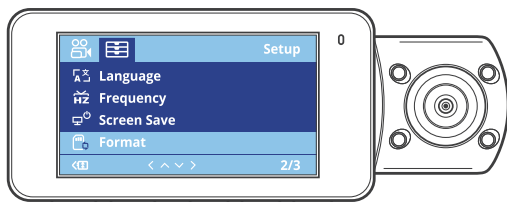

 Press the Menu button twice and toggle down to **Format**




Press the **OK** button to confirm formatting the card

Use the **UP** and **DOWN** navigation buttons and go to the Format setting. Press the **OK** button to confirm the selection.

You may now disconnect from power. The camera will shut down after 3 seconds. The camera should begin recording automatically the next time it is powered on.

Step 4: Mount the Rear Camera


Mount the rear camera as shown below. Use rear camera cable to connect the rear camera to the V33 Plus camera.

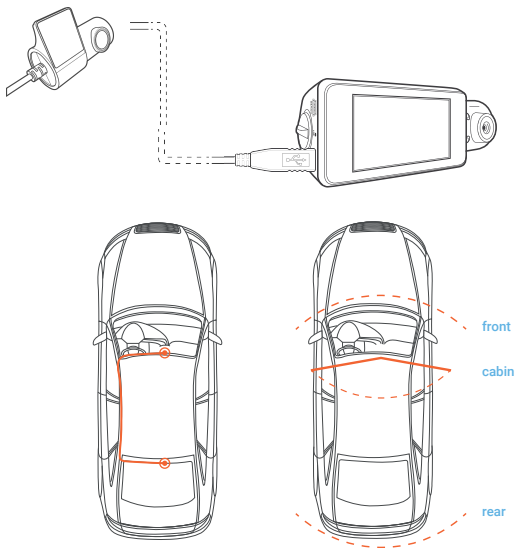

Step 5: Installing the Camera onto the Windshield

Place the camera on the mount and carefully route the power cable around the windscreen and tuck in under the trim.

Plug the Car Charger Cable into a 12V DC power outlet or the car cigarette lighter. Connect car charger to the camera. The camera will auto-start recording once powered on.

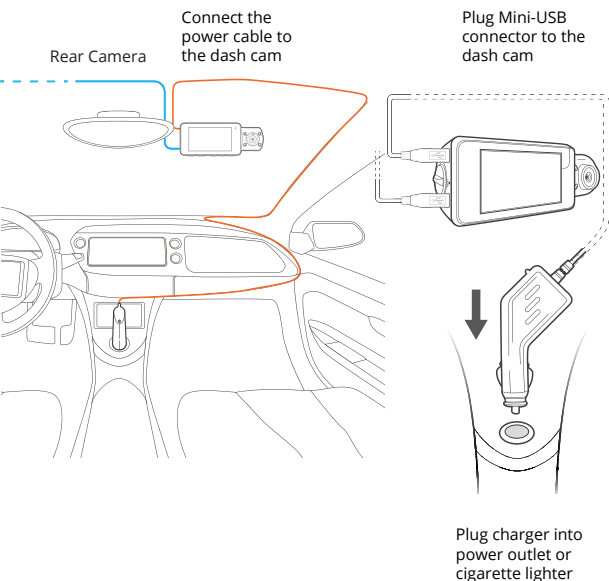

4. Basic Operation

Device Power

The device will be automatically powered on when plugged into a 12V accessory socket or cigarette lighter when receives a charge (i.e. the vehicle is started).

To turn the device on manually, press and hold the **Power** button until the welcome screen appears.

The camera will automatically start recording when it's powered on.



Press and hold the Power button to turn the device on manually

Menu Settings

Power on the camera. If the camera is recording, press the **OK** button to stop recording.

Hold the **MENU** button and toggle to the desired mode. Press the **MENU** button once to enter the Video Settings. Press the **MENU** button twice to enter the Setup Settings.

Video Recording

The camera will automatically start recording when the device receives a charge. The LED lights and red dot will blink red device when recording. Press the **OK** button to stop recording.




Video Playback

Playback of videos can be done on the device or a computer. To playback a video on the device, hold **MENU** button and toggle to the Playback mode. Use the **UP** and **DOWN** navigation buttons to toggle to the desired video. Press the **OK** button to play.



During playback, use the **OK** (pause), **UP** (rewind) and **DOWN** (fast forward) buttons to control the video playback.

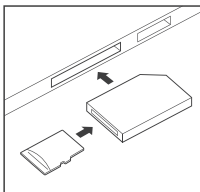


To playback a video using an SD card adapter, remove the memory card and insert it into an SD card adapter. Place the adapter in the computer. Then place the adapter into the computer.

On the computer, navigate to device drive. The videos are stored at: \CARDV\Movie. The **locked videos** are stored at: \CARDV\Movie\RO. Then select the video to playback.

Wi-Fi Connect

Step 1



With your dash cam powered on, hold the UP navigation button to enable the Wi-Fi function. The Wi-Fi name (aka the SSID and password for the dash cam should be displayed on-screen.

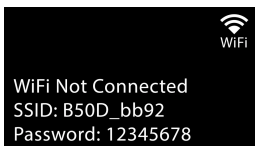

Step 2


On your mobile device, navigate to your Wi-Fi settings. Connect to your dash cam's Wi-Fi by tapping its name when it appears. Enter your dash cam's Wi-Fi password if you are prompted to do so.

Note: On some mobile devices, you may have to try to connect more than once. To ensure you've successfully connected, your mobile device's screen should resemble the examples shown.

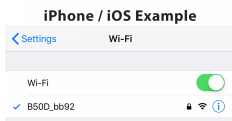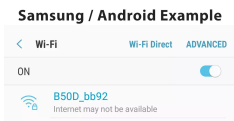

Step 3

Once you're connected to the dash cam, open the Rexing Connect app on your mobile device. Please select "Keep Trying Wi-Fi" if you see the notification on the right.

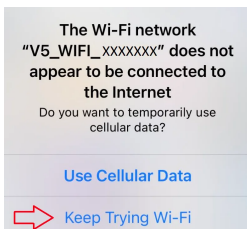

Step 4

In the app, hit the "Connect" button to connect to your dash cam, allowing you to access live view and view/download your recordings.

Note: Hold to the **UP** button for 2 seconds to disconnect the Wi-Fi.

Rexing Connect App

Easily download the app by scanning the QR code below or search via the App Store or Google Play.



Wi-Fi Connect Troubleshooting

If you bring up the Rexing Connect app and cannot connect your phone to the dash cam please go to

<https://www.rexingusa.com/wifi-connect/>

OR scan the QR code below.



Internal GPS

The built in GPS logger will record the speed and location of your vehicle as you drive.

You can then access these information while playing back your recordings using the GPS Video player. For windows and Mac, available at

<https://www.rexingusa.com/support/rexing-apps/>.

The dash cam will automatically search for the GPS signal once it's connected to the power source. Press the **MENU** button once and go to Video Settings. Toggle the GPS setting, and select your favorite speed unit.

After a GPS signal is found, the screen icon will turn from *not connected* to *active* - as per the below icons.



GPS Signal
Searching



GPS Signal
Active



GPS Signal
Not Connected

GPS Date-Time Troubleshooting

If your dash cam GPS date and time are incorrect please go to

<https://www.rexingusa.com/gps-date-time/>

OR scan the QR code below.




Parking Monitor (Parking Surveillance Mode)

Parking monitor provides surveillance on your parked vehicle. When the engine is off, the hardwire kit is used to provide continuous power and protect your car battery from being discharged.

Option 1: Vibration Detection

To enable the Parking Monitor, you'll need to connect it with a Rexing Smart Hardwire Kit (sold separately).

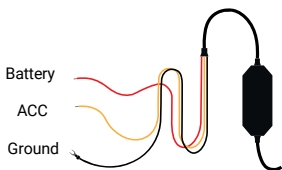

This feature will allow the dash cam to switch to parking mode automatically if the vehicle's engine turns off and switch back to the normal recording after the vehicle's engine turns on.

Gravity Sensing Record:

The Gravity Sensing detects significant or sudden movement (such as an impact or collision), it will trigger an event recording. We suggest setting the "Gravity Sensing" to High sensitivity for Parking Mode Recording.

Note:

If you do not use the parking mode function, please change the Gravity Sensing sensitivity to low. Otherwise, the video will easily be locked and the video cannot be deleted by the loop recording function. This will cause the memory card to be full of locked videos and cause the recorder to fail to work normally.

Please DO NOT ENABLE the Parking Monitor function in the settings of the dash cam WITHOUT connecting a smart hardwire kit. They may cause a malfunction.

Option 2: Motion Detection

To use this feature, you need to connect it with a Rexing Intelligent Hardwire Kit (sold separately). Make sure that the Parking Mode is turned off on your dash cam. **Make sure that the Parking Mode is *turned off* on your dash cam, otherwise it may cause a malfunction.**

Once the sensor has detected MOTIONS. The intelligent hardwire kit will power up the dash cam automatically and start recording until the MOTION is cleared.

Please go to

<https://www.rexingusa.com/hwk-install/>

to watch a video tutorial about the installation or scan the QR code below.



Taking Photos


To take a photo, stop video recording first by pressing the **OK** button. Hold the **MENU** button and toggle to the Photo Mode. Then press the **OK** button to take a photo.

To view a photo, stop video recording and toggle to the photo Mode.

Press the **UP** and **DOWN** navigation buttons to toggle through your photos.



To delete a photo, stop video recording and toggle to the Photo Mode and toggle through the videos and photos to the one you want to delete.

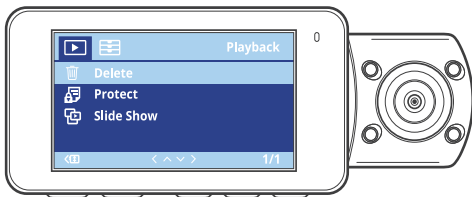

Press the **MENU** once and toggle to the Delete option.

Press the **OK** Button and select Delete Current or Delete All.

FCC ID: 2AW5W-V33

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

REXING[®]



MADE IN CHINA