

REXING[®]

C4

User Manual

The information in this manual is subject to change without notice.

Activate Your

18-Month Warranty

& Unlock Exclusive Perks!

Activate within 30 days of purchase to
extend your limited 12-month warranty to 18 months
and unlock bonus rewards just for registered users.

Scan the QR to register &
discover your exclusive perks.

SCAN
ME!



<https://www.rexingusa.com/productreg/>

Overview

Thank you for choosing **REXING!**

We hope you love your new products as much as we do. If you need assistance, or have any suggestions to improve it, please contact us.

 care@rexingusa.com

 (877) 740-8004

Our support team will respond to you as soon as possible.

Always a surprise with Rexing

Check us out here.

- <https://www.facebook.com/rexingusa/>
- <https://www.instagram.com/rexingdashcam/>
- <https://www.rexingusa.com/support/registration/>

 Facebook



 Instagram



 Site



 Product Support



 
What's in the box?



1




2



3



 4




5



6



 
8



7


-
1. C4 Quick Start Guide
 2. Safety Guide
 3. Suction Cup Mount
 4. Cable Management Tool
 5. Rexing C4 Dash Cam
 6. Car Power Connector (12ft)
 7. C4 Rear Camera with Extension Cable
 8. Warning sticker
-

 Camera Overview

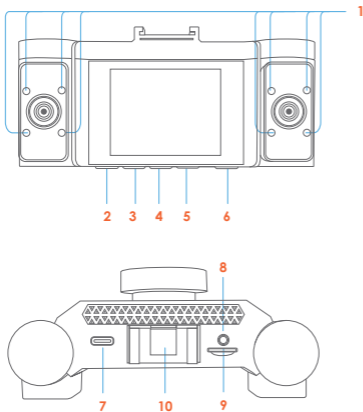


1. 8 IR Lights
2. Power Button / Screen On/Off
3. Up Button / Recording / Take Photo
4. Menu Button / Playback Button
5. Down Button/ Screen Toggle Button / Mic Button
6. OK (Confirm) Button / Video Lock Button / Wi-Fi Button
7. Charger/ Type C Port
8. Rear Camera Port
9. Micro SD Card Slot
10. Mounting Area

 Screen Icons

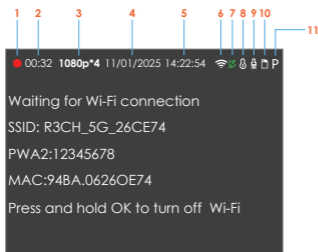

 1. Recording (on)
2. Recording Time (current clip)
3. Video Resolution
4. Current Date (MM/DD/YYYY)
5. Time (24h)
6. Wi-Fi (connected)
7. GPS Signal (connected)
8. Current video file locked
9. Audio Recording (on)
10. Memory Card (Inserted)
11. Parking Monitor (on)

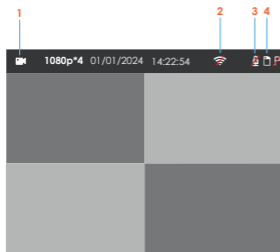


1. Recording (off)
2. Wi-Fi (not connected)
3. Audio Recording (off)
4. Parking Monitor (off)

Installation

Step 1: Install the Suction Cup Mount and Dash Cam

 
Remove the protective plastic from the suction cup, clean the mounting area of the windshield with rubbing alcohol, and wipe dry with a lint free cloth. Now, clean the back of the suction cup with rubbing alcohol and wipe dry with a lint free cloth. Next, apply moisture to the suction cup to create a better seal and mount the suction cup to the windshield as shown below attach the device by fitting the tab on the top of the mount into the slot on the top of the device.

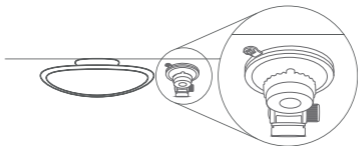

Orient the mount as shown


Step 2: Insert the memory card

 
The Rexing C4 accepts **Class 10/UHS-3 or higher** Micro SD memory cards up to 256GB. You will need to insert a memory card before begin recording. **Before inserting or removing a memory card, first ensure you've powered down the device.** Gently push the memory card in until you hear a click, and allow the spring release to push the card out.

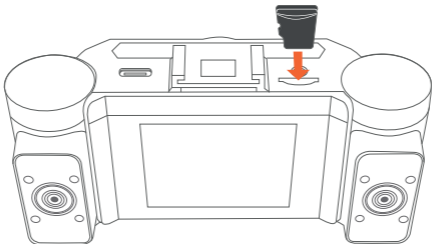


Step 3: Power on the Camera and Format the Memory Card

Power the camera by connecting the charger to the car cigarette lighter and camera. **Before you start using a new memory card, you MUST format the card within the camera using the format function.** Always backup important data stored on the memory card before formatting.

 To format the memory card, make sure you have inserted your memory card, then turn on the device by connecting to a power source. Press  button to stop recording. Then press the **MENU** button twice to enter the Menu.

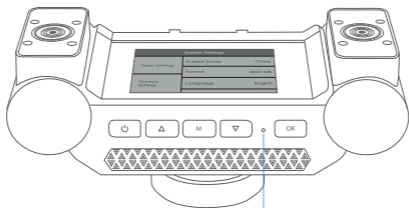

 Press the Menu button twice and toggle down to **Format**

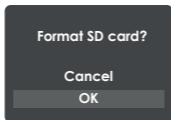

Press the **OK** button to confirm formatting the card

 
Before formatting your memory card, always remember to make backup copies of all important data stored on the device. The manufacturer's warranty does not cover loss of data resulting from user actions.

It's recommended that you format your memory card after transferring files to your computer or at least once a month.

Use the **UP** and **DOWN** navigation buttons and go to the Format setting. Press the **OK** button to confirm the selection. You may now disconnect from power. The camera will shut down after 3 seconds. The camera should begin recording automatically the next time it is powered on.

Step 4: Mount the Rear Camera


Mount the rear camera as shown below. Use rear camera cable to connect the rear camera to the C4 camera.

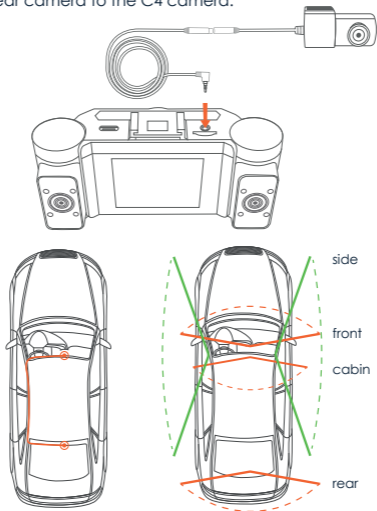

Step 5: Installing the Camera onto the Windshield

Place the camera on the mount and carefully route the power cable around the windscreen and tuck in under the trim.

 Plug the Car Charger Cable into a 12V DC power outlet or the car cigarette lighter. Connect car charger to the camera. The camera will auto-start recording once powered on.

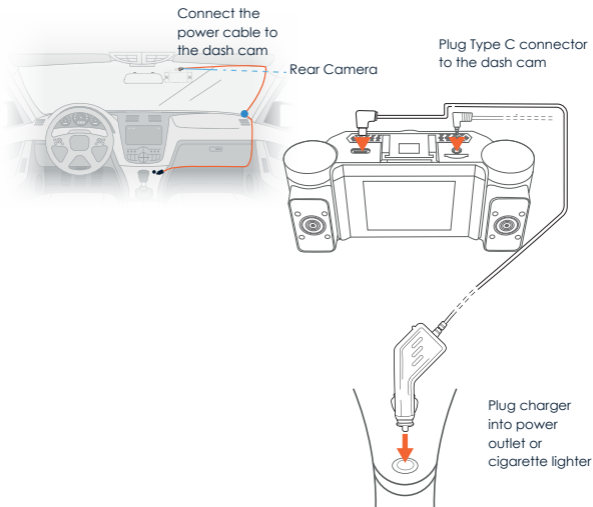


Basic Operation

Device Power

The device will be automatically powered on when plugged into a 12V accessory socket or cigarette lighter when receives a charge (i.e. the vehicle is started).


To turn the device on manually, press and hold the **Power** button until the welcome screen appears.

 The camera will automatically start recording when it's powered on.

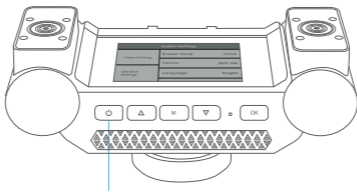

Press and hold the **Power** Button to turn the device on manually

Menu Settings

Power on the camera. If the camera is recording, press  button to stop recording.

 
Hold the **MENU** button and toggle to the desired mode.

Press the **MENU** button once to enter the Video Settings.

Press the **MENU** button twice to enter the Setup Settings.

Video Recording

The camera will automatically start recording when the device receives a charge. The LED lights and red dot will blink red device when recording. Press the **OK** button to stop recording.

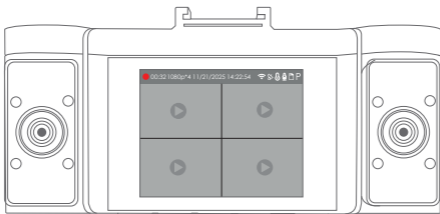

Approximate recording time

Memory Card Size	4CH 1080p (1080p+1080p+1080p+1080p)
16 GB	~0.9 Hours
32 GB	~1.75 Hours
64 GB	~3.5 Hours
128 GB	~7 Hours
256 GB	~14 Hours

Loop Recording

Default setting: 1 Minute

Video will be continually recorded in segments. When the storage limit is reached on the memory card, new recordings will automatically overwrite the oldest recordings. **Locked video files on the memory card will remain protected and won't be overwritten by Loop Recording.**

Off
1 Minutes
2 Minutes
3 Minutes

Note: Turning Loop Recording off will require you to manually clear recordings from your memory card whenever storage is full. We highly recommend keeping Loop Recording enabled.

G Sensing

Default setting: Low

If a change in gravitational forces is detected, such as in the event of a vehicular accident, the G-sensor will signal to the camera, and an automatic file lock will be placed on the current video, preserving your most crucial footage.

 
Locked videos can be found on the memory card under "\CARDV\MOVIE\RO".

High
Middle
Low
Close

Note: Locked video files won't be erased by Loop Recording. They will remain on the memory card until they are manually deleted or when the card is formatted.


Video Playback

Playback of videos can be done on the device or a computer. To playback a video on the device, hold **MENU** button and toggle to the Playback mode. Use the **UP** and **DOWN** navigation buttons to toggle to the desired video. Press the **OK** button to play.

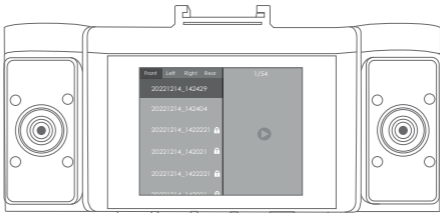

During playback, use the **OK** (pause), **UP** (rewind) and **DOWN** (fast forward) buttons to control the video playback.

 
To playback a video using an SD card adapter, remove the memory card and insert it into an SD card adapter. Place the adapter in the computer. Then place the adapter into the computer. On the computer, navigate to device drive. Then select the video to playback.

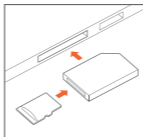

Wi-Fi Connect

Step 1:

 With your dash cam powered on, hold the **OK** navigation button to enable the Wi-Fi function. The Wi-Fi name (aka the SSID and password for the dash cam should be displayed on-screen.




Step 2:

On your mobile device, navigate to your Wi-Fi settings. Connect to your dash cam's Wi-Fi by tapping its name when it appears. Enter your dash cam's Wi-Fi password if you are prompted to do so.

Note: On some mobile devices, you may have to try to connect more than once. To ensure you've successfully connected, your mobile device's screen

 Samsung / Android Example




iPhone / iOS Example



Step 3:

Once you're connected to the dash cam, open the Rexing Connect app on your mobile device.

 Please select "Keep Trying Wi-Fi" if you see the notification on the right.

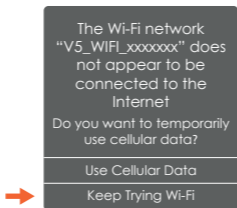

Step 4:

In the app, hit the "Connect" button to connect to your dash cam, allowing you to access live view and view/download your recordings.

Note:

Hold to the **OK** button for 2 seconds to disconnect the Wi-Fi connection.

Rexing Connect App

Easily download the app by scanning the QR code below or search via the App Store or Google Play



Note: Permission Usage Statement

To provide full functionality, this app may require access to the following permissions:

- Location: Used to access location information for user posts.
- Storage: Used to save recorded video files or export data to your device.
- Camera: Used for capturing photos and adding them to user posts.
- Local Network: Used for pairing and connecting with the device.

We are committed to protecting your privacy. All permissions are used solely for functionality purposes and do not collect or store your personal information. You can manage permissions at any time through your device's system settings.

Wi-Fi Connect Troubleshooting

If you bring up the Rexing Connect app and cannot connect your phone to the dash cam please go to <https://www.rexingusa.com/wifi-connect/> OR scan the QR code below.



GPS Logger

To activate the GPS logger feature, you'll need to connect the GPS Logger (Sold Separately).

The GPS logger will record the speed and location of your vehicle as you drive.

You can then access these information while playing back your recordings using the GPS Video player. For windows and Mac, available at <https://www.rexingusa.com/support/rexing-apps/>

The dash cam will automatically search for the GPS signal once it's connected to the power source. Press the **MENU** button once and go to Video Settings. Toggle the GPS setting, and select your favorite speed unit.

After a GPS signal is found, the screen icon will turn from **not connected** to **active** - as per the below icons.



GPS Signal
Searching



GPS Signal
Active

GPS Date-Time Troubleshooting

If your dash cam GPS date and time are incorrect please go to <https://www.rexingusa.com/gps-date-time/> OR scan the QR code below.




Parking Monitor (Parking Surveillance Mode)

Parking monitor provides surveillance on your parked vehicle. When the engine is off, the hardwire kit is used to provide continuous power and protect your car battery from being discharged.

Option 1: Vibration Detection

 To enable the Parking Monitor, you'll need to connect it with a Rexing Type-C GPS Smart Hardwire Kit or Type-C Smart Hardwire Kit (sold separately).

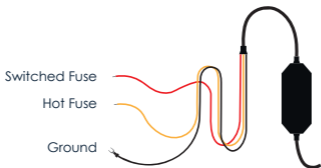

This feature will allow the dash cam to switch to parking mode automatically if the vehicle's engine turns off and switch back to the normal recording after the vehicle's engine turns on.

Gravity Sensing Record:

The Gravity Sensing detects significant or sudden movement (such as an impact or collision), it will trigger an event recording.

Please **DO NOT ENABLE** the Parking Monitor function in the settings of the dash cam **WITHOUT** connecting a Type-C GPS Smart Hardwire Kit or Type-C Smart Hardwire Kit . They may cause a malfunction.

We kindly suggest taking a moment to watch our tutorial video. It's designed to help you have a smooth and successful installation experience. We believe you'll find it very helpful!

Please go to <https://www.rexingusa.com/ihwkinstall> or scan QR code



Warranty & Support

Warranty

The Rexing C4 Dash Cam comes with a full 12-month warranty. If you register your product on our official site (<https://www.rexingusa.com/support/registration>), you can extend the warranty to 18 months.

Support

If you have any questions regarding your product, please do not hesitate to contact us at care@rexingusa.com, or call us at (877) 740-8004. Queries are typically answered within 12-24 hours.

Your opinion matters

Rexing is firmly committed to always improving our products, services, and user experience. If you have any thoughts on how we can do even better, we welcome your constructive feedback and suggestions.

Connect with us today at care@rexingusa.com

Thank you for choosing Rexing!

FCCID: 2AW5W-C4

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

REXING®



MADE IN CHINA