

REXING[®]

V1 Basic

Quick Start Guide

クイックスタートガイド

Table of Contents

page

English

Overview	4
What's in the Box	5
Camera Overview	6
Installation	7
Basic Operation	11

日本語

概説	18
本製品の同梱物	19
カメラの概説	20
画面のアイコン	21
基本操作	25

1. Overview

Thank you for choosing **REXING**! We hope you love your new product as much as we do.

If you need assistance, or have any suggestions to improve it, please contact us. You can reach us via care@rexingusa.com or call us at (203) 800-4466. Our support team will respond you as soon as possible.

Always a surprise in REXing. Check us out here.

<https://www.facebook.com/rexingusa/>
<https://www.instagram.com/rexingdashcam/>
<https://www.rexingusa.com/support/registration/>






2. What's in the box



1. Rexing V1 Basic Dash Cam
2. Car Charger
3. Dash Cam Mount Plate & 3M Adhesive
4. Mini-USB Cable
5. Cable Management Tool
6. Cable Clips
7. V1 Basic Quick Start Guide
8. Safety Guide

3. Camera Overview

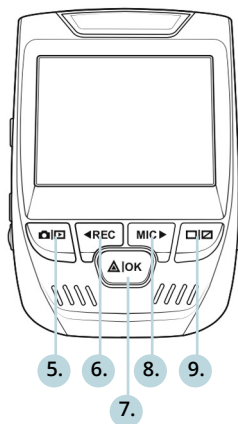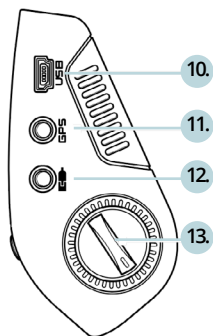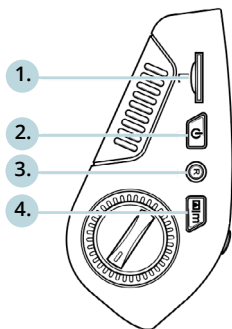

1. Micro SD Card Slot
2. Power Button
3. Reset Button
4. Menu Button
5. Mode Button
6. REC (Record) Button *
7. OK (Confirm) Button **
8. MIC (Microphone) Button ***
9. Screen Button
10. Mini-USB Port
11. GPS Logger Port
12. Rear Camera Port (Not Support)
13. Lens Angle Adjustment

* The Camera is recording when the LED is flashing red.

** The Camera is recording when the LED is flashing red. The device charging or powered on when the LED is solid blue.

*** The device is charging or powered on when the LED is solid blue.


4. Installation

Step 1: Install the Dash Cam

Place the 3M adhesive on the mount and properly orient the mount square to the roof and hood line of the vehicle. **Important!** Ensure the T-interlock on the Mount is oriented in the correct direction (as shown below).

Firmly press the mount onto the windshield. **Wait at least 20 minutes before mounting the camera.**

Orientation mount as shown

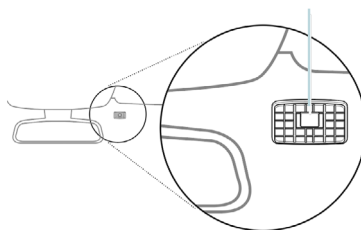


Step 2: Insert the Memory Card

The Rexing V1 Basic accepts [Class 10/ UHS-1 or higher] Micro SD memory cards up to 256 GB. You will need to insert a memory card **before you can begin recording. Before inserting or removing a memory card, first ensure you've powered down the device.**

Gently push the memory card in until you hear a click, and allow the spring release to push the card out.

You may now disconnect from power. The camera will shut down after 3 seconds. The camera should begin recording automatically the next time it is powered on.

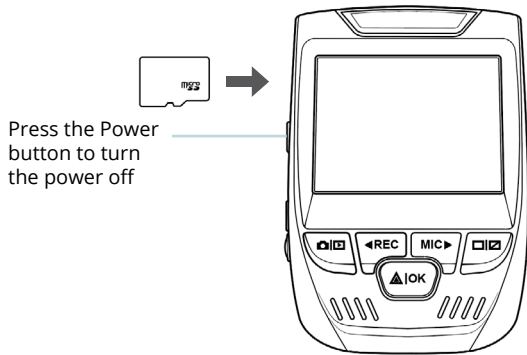

Press the Power button to turn the power off

Step 3: Power the Camera and Format the Memory Card

Power the camera by connecting the charger to the car cigarette lighter and camera.

To ensure the V1 Basic records to your memory card properly and without error. **Before you start using a new memory card, you must format the card within the camera using the format function.** Always backup important data stored on the memory card before formatting.

To format the memory card, make sure you have inserted your memory card, **then turn on the device by connecting to a power source.** Press REC to stop recording. Then press the MENU button **twice** to enter the System Setup Menu. Use the REC and MIC buttons and go to the Format setting. Press the **OK** Button to confirm the selection.

Press the Menu button twice



All data will be deleted

Cancel

OK


Press the OK button to confirm formatting the card

Step 4: Installing the Camera onto the Windshield

Place the camera on the mount and carefully route the power cable around the windscreen and tuck in under the trim.

Plug the Car Charger Cable into a 12V DC power outlet or the car cigarette lighter.

Connect car charger to the camera. The camera will auto-start recording once powered on.

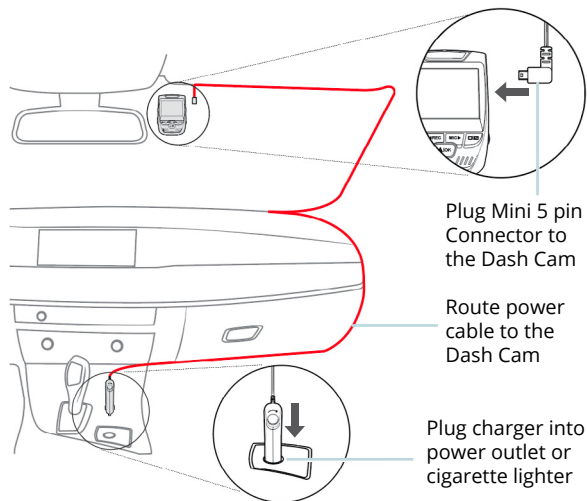

5. Basic Operation


Device Power

The device is automatically powered on when plugged into a 12V accessory socket or cigarette lighter and receives a charge (i.e.: the vehicle is started.)

To turn the device on manually, press and hold the POWER button until the welcome screen appears.

The camera will automatically start recording when powered on.


Press and hold the POWER button to turn the device on manually

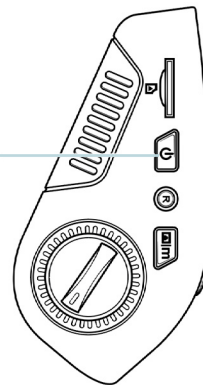

Menu Settings

Power the camera on. If the camera is recording, press the REC button to stop recording. Press the MODE button and toggle to the desired mode.

Press the MENU button once to enter the settings menu for a Mode. Press the MENU button twice to enter the System Settings.

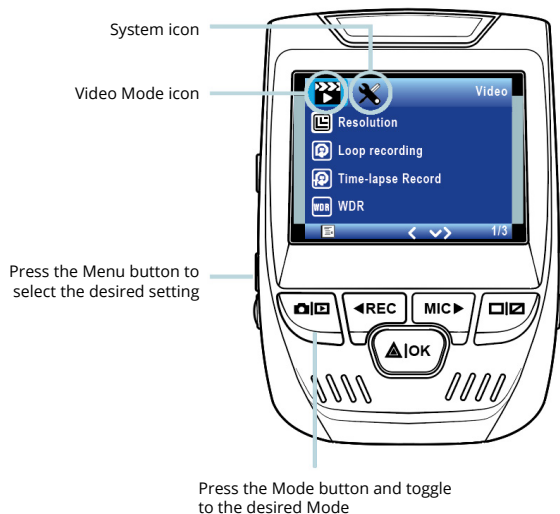

Video Recording

The camera will automatically start recording when the device receives a charge. The LED lights and the red dot will blink when the device is recording. Press the REC button to stop recording.

Video Playback


Playback of videos can be done on the device or a computer. Also, if you have purchased a Rexing GPS Logger you may play back the recordings in a specialized application.



To playback a video on the device, toggle to the Playback mode. Use the REC and MIC buttons to toggle to the desired video. Press the OK button to play.


During playback use the OK (pause), MIC (fast forward) and REC (rewind) buttons to control the video playback.

To playback a video on the computer either use an SD card adapter or connect the device to the computer directly using the USB to Mini B 5pin male cable.

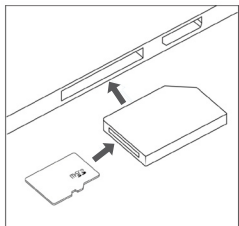

To playback a video using an SD card adapter, remove the memory card and insert it into an SD card adapter. Place the adapter in the computer.

To playback a video using USB to Mini B 5pin male cable, connect the USB to Mini B 5pin Male Cable to the device and the USB connector to the computer.

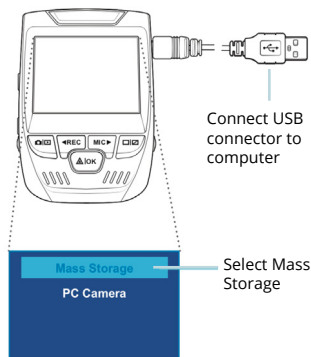

After the device powers up, press the OK Button to select Mass Storage. On the computer, navigate to device drive. The videos are stored at: \CARD\ MOVIE.

Select the video to playback.

Parking Monitor

You can enable the parking monitor function through the setup option.

GPS Logger

(Need to purchase separately. **ASIN: B08CZDXVLJ**)

When connected to the camera, it will record the speed and location of your vehicle as you drive.

You can then access this information while playing back your recordings using the GPS Video player (For Windows and Mac, available at rexingusa.com).

Press the MENU button twice and enter the System Settings.

Toggle to the GPS Speed Unit setting and select your preferred speed unit.

After a GPS signal is found, the screen icon will turn from blue to green.

Please visit gpsa.rexingusa.com to watch a video tutorial.

GPS Signal
(not connected)



GPS Signal
(searching)



GPS Signal
(active)



Taking Photos

To take a photo, stop video recording and toggle to the Photo Mode.

Press the OK Button to take a photo.

To view a photo, stop video recording and toggle to the Playback Mode.

Press the REC and MIC Buttons to toggle through your photos.

To delete a photo, stop video recording and toggle to the Playback Mode and toggle through the videos and photos to the one you want to delete.

Press the MENU button once and toggle to the Delete option.

Press the OK Button and select Delete Current or Delete All.


Toggle to the Playback mode and select a photo to view



Toggle to the Delete option



Choose the desired option

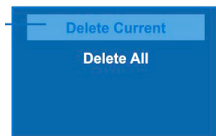

1. 概説

REXINGを選んでいただきありがとうございます！お客様が、私たちと同様、新しい商品を気に入っていただけることを願っています。サポートが必要な場合、または改善のための提案がありましたら、是非、ご連絡ください。jpcare@rexingusa.comに電子メールを送ることができます。当社のサポートチームができるだけ早くお返事いたします。

常にREXINGでサプライズを。こちらから最新情報をチェックください。

<https://www.facebook.com/rexingusa/>
<https://www.instagram.com/rexingdashcam/>
<https://www.rexingusa.com/support/registration/>

Facebook



Instagram



ホームページ






2. 本製品の同梱物



1. REXING V1 Basicドライブレコーダー
2. 車載充電器
3. ドライブレコーダーマウントプレートと3M接着シール
4. ミニUSBケーブル
5. ケーブル管理ツール
6. ケーブルクリップ
7. V1 Basic クイックスタートガイド
8. 安全ガイド

3. カメラの概説

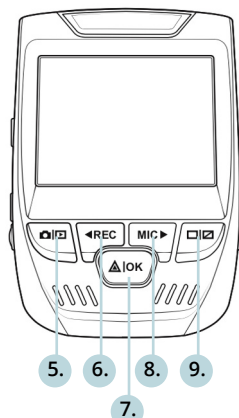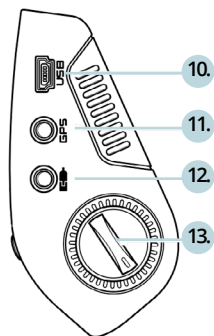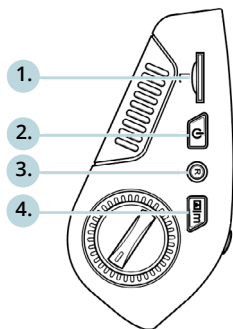

1. マイクロSDカードスロット
2. 電源ボタン
3. リセットボタン
4. メニューボタン
5. モードボタン
6. 録画ボタン*
7. OKボタン**
8. マイクボタン***
9. 画面ボタン
10. ミニUSBポート
11. GPSロガーポート
12. 背面カメラポート(サポートなし)
13. レンズ角度調整

* LEDが赤く点滅している時、カメラは録画中です。

** LEDが赤く点滅している時、カメラは録画中です。LEDが青く点灯している時、機器は充電中または電源が入っている状態です。

*** LEDが青く点灯している時、機器は充電中または電源が入っている状態です。


4. 設定

ステップ1: ドライブレコーダーの設定

3Mテープをマウントに置き、マウントスクエアを適切に車の屋根とフーラインの方向に合わせます。重要！ マウントのT-インターロックが正しい方向に置かれていることを確認してください。

マウントをフロントガラスにしっかりと押し付けます。カメラを取り付けるまで、少なくとも20分は待ってください。

マウントを図のように向けて置きます

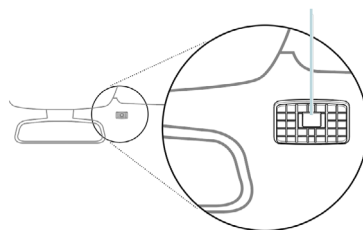


ステップ2: メモリーカードを挿入します

Rexing V1 Basicは、最大256GBのマイクロSDメモリーカード（Class 10/UHS-1以上）に対応しています。録画を開始する前にメモリーカードを挿入する必要があります。

メモリーカードを挿入または取り外す前に、まず機器の電源が切れていることを確認してください。

カチッという音がするまでメモリーカードを静かに押し込み、そして、押すとスプリングが解除されてカードを取り外すことができます。

ここで電源を切ります。3秒後にカメラの電源が切れます。カメラは次回電源を入れた時、自動的に録画が開始されるはずですが。

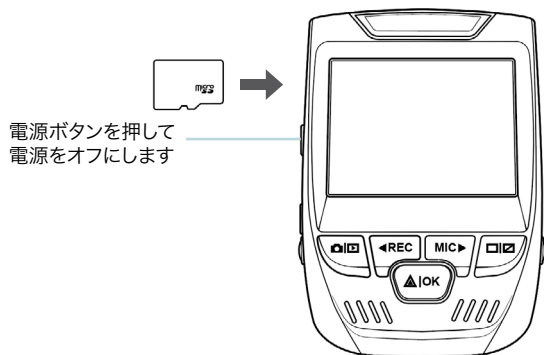

ステップ3: カメラの電源を入れて、メモリーカードを初期化します

充電器を車のシガーライターとカメラに接続して、カメラの電源を入れます。

V1 Basicメモリーカードに適切に間違いなく記録することを確認にします。新しいメモリーカードを使用し始める前に、初期化機能を使用してカメラ内でカードを初期化しなければなりません。初期化する前に、メモリーカードに保存されている重要なデータを常にバックアップしてください。

メモリーカードを初期化するためには、メモリーカードが挿入されていることを確認した後、電源に接続して、機器の電源を入れます。録画ボタンを押して録画を停止します。その後、メニューボタンを2回押して、システム設定メニューに入ります。録画ボタンとマイクボタンを使用して、初期化設定に移動します。OKボタンを押して選択を確認します。

メニューボタンを2回
押します



全ての日付が削除
されます

キャンセル

OK


OKボタンを押して、
カードの初期化を
確認します

ステップ4:フロントガラスへのカメラの取り付け

カメラをマウントに置き、電源ケーブルをフロントガラスの周りに注意して配線し、トリムの下にしまい込みます。

車載充電器のケーブルを12V DC電源コンセントまたは車のシガーライターに差し込みます。

車載充電器をカメラに接続します。電源を入れるとカメラは自動的に録画を開始します。

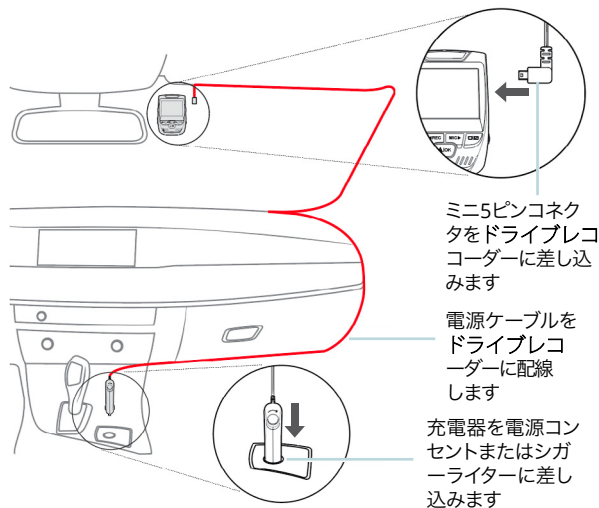

ミニ5ピンコネク
タをドライブレコ
ーダーに差し込
みます

電源ケーブルを
ドライブレコ
ーダーに配線
します

充電器を電源コン
セントまたはシガ
ーライターに差し
込みます

5. 基本操作


機器の電力

機器が12Vアクセサリソケットまたはシガーライターに差し込まれて、充電されたら(すなわち、車のエンジンがかかった時)、機器に自動的に電源が入ります。

機器の電源を手動で入れるためには、「ようこそ」の画面が表示されるまで電源ボタンを押し続けます。

電源が入ると、カメラは自動的に録画を開始します。

電源ボタンを長押しして、機器の電
源を手動で入れます。

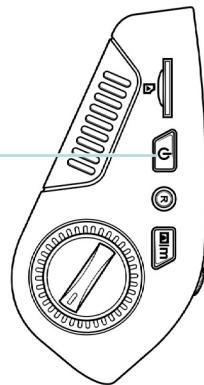

メニューの設定

カメラの電源を入れます。カメラが録画中の場合は、録画ボタンを押して録画を停止します。モードボタンを押して、希望のモードに切り替えます。

メニューボタンを1回押して、モードの設定メニューに入ります。メニューボタンを2回押して、システム設定に入ります。



電源が入ると、カメラは自動的に録画を開始します

録画

機器が充電されたら、カメラは自動的に録画を開始します。機器が録画中の時、LEDが点灯し、赤い点が点滅します。録画ボタンを押して、録画を停止します。

ビデオの再生


ビデオの再生は、機器またはコンピューターで実行できます。また、Rexing GPS ロガーを購入した場合、特殊アプリケーションで録画を再生できます。



機器でビデオを再生するためには、再生モードに切り替えます。録画ボタンとマイクボタンを使用して、希望のビデオに切り替えます。OKボタンを押して再生します。

再生中は、OK(一時停止)、マイク(早送り)、録画(巻き戻し)ボタンを使用して、ビデオの再生を制御します。


コンピューターでビデオを再生するには、SDカードアダプターを使用するか、またはUSBケーブルを使用して機器をコンピューターに直接接続します。

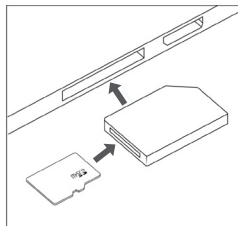

SDカードアダプターを使用してビデオを再生するためには、メモリーカードを取り外して、それをSDカードアダプターに挿入します。アダプターをコンピューターに設置します。

USBケーブルを使用してビデオを再生するためには、USBケーブルを機器とコンピューターに接続します。機器に電源が入った後、OKボタンを押してマストレージを選択します。

コンピューター上で、機器ドライブを移動します。ビデオは\ICARDV\MOVIEに保存されます。再生するビデオを選択します。

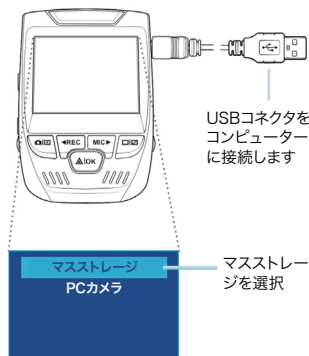

駐車モニター

設定オプションで、駐車監視機能をアクティブにすることができます。

GPSロガー

(別途購入する必要があります。ASIN:B08CZDXVLJ)

カメラに接続すると、運転中の車の速度と位置が記録されます。

GPSビデオプレーヤーを使用して記録を再生しながら、これらの情報にアクセスすることができます

(WindowsおよびMacの場合、rexingusa.comで入手可能)。

メニューボタンを2回押して、システム設定に入ります。

GPS速度単位の設定に切り替えて、**希望**の速度単位を選択します。

GPS信号が検出されると、画面のアイコンが青から緑に変わります。

チュートリアルビデオを見るためには、gpsa.rexingusa.comにアクセスしてください。

GPS信号(接続
されていない)



GPS信号(検
索中)



GPS機能(アクテ
イブ)



写真を撮る

写真を撮るためには、ビデオ録画を停止し、写真モードに切り替えます。

OKボタンを押して写真を撮ります。

写真を表示するためには、ビデオ録画を停止し、再生モードに切り替えます。

録画ボタンとマイクボタンを押して、写真に切り替えます。

写真を削除するためには、ビデオ録画を停止して再生モードに切り替え、が削除したいビデオと写真に切り替えます。

メニューボタンを1回押して、削除オプションに切り替えます。

OKボタンを押して、「現在選択しているものを削除」または「全て削除」を選択します。

再生モードに切り替えて、表示するための写真を選択します



削除オプションに切り替えます



希望のオプションを選択します

現在選択しているものを削除
全て削除

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

REXING[®]



MADE IN CHINA